



### **Configure and customize the Info Bar/Panel:**

\*On the Siteworks upper left main screen tap the **3-Bar Hamburger Icon** and select **Settings**, then tap **Info Bar/Panel**.

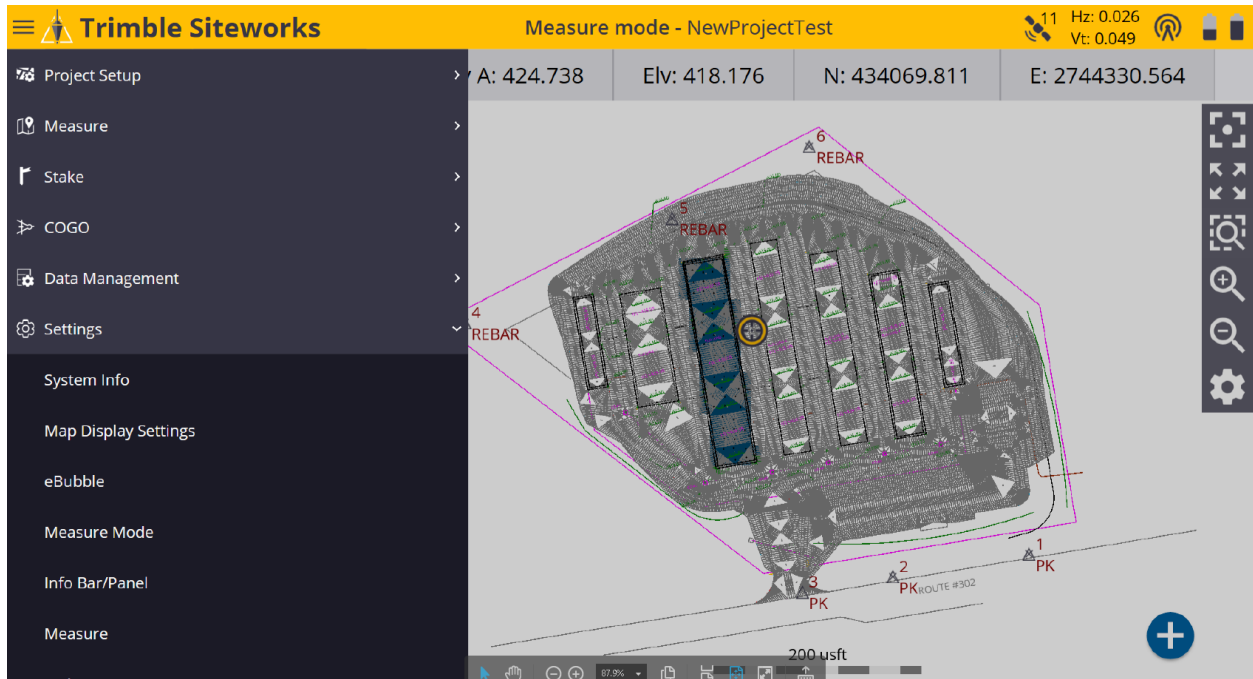

\*Within the **Information Bar** tab, check the box and select what you want displayed on the **Information Bar**.

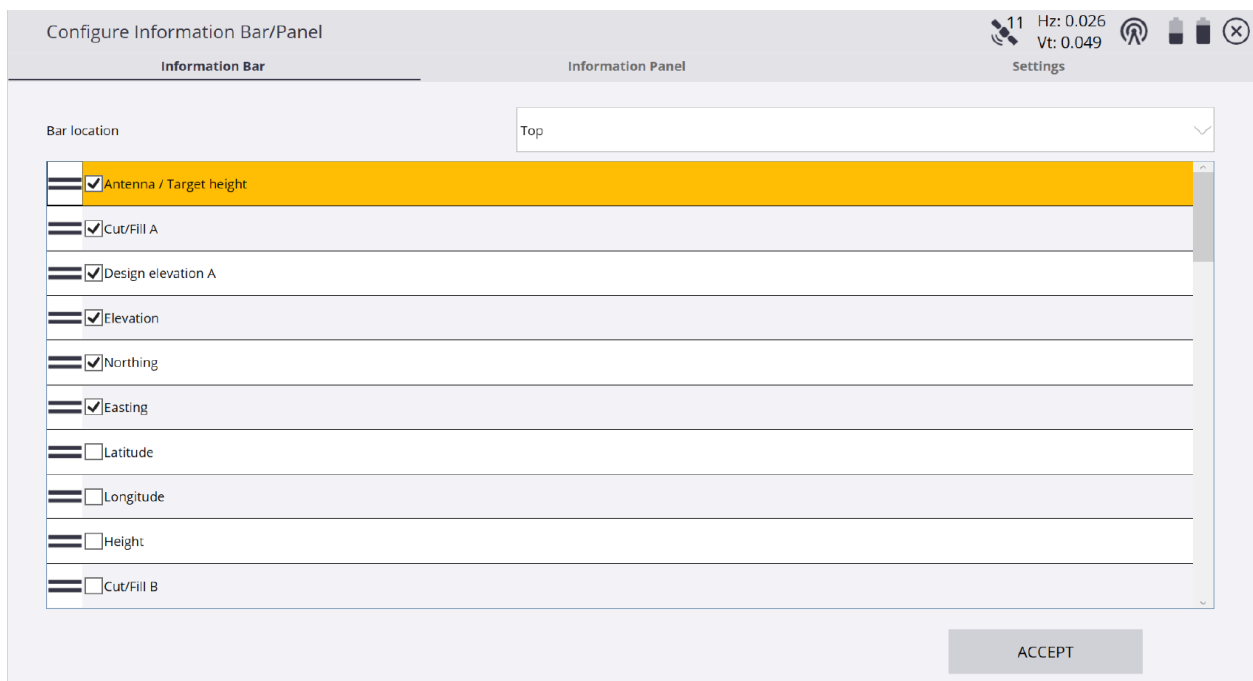

\*By holding down on the **double bar icon** next to left of the **display check box** drag the item you want displayed in priority order from the top down where the top value will display first on the Siteworks main screen **Info Bar**.

Configure Information Bar/Panel

Information Bar Information Panel Settings

Bar location: Top

- ☒ Antenna / Target height
- ☒ Cut/Fill A
- ☒ Design elevation A
- ☒ Elevation
- ☒ Easting
- ☒ Northing
- ☒ Easting
- ☐ Latitude
- ☐ Longitude
- ☐ Height
- ☐ Cut/Fill B

ACCEPT

\*From the **Bar location** window drop-down list select where you want to see the **Information Bar** on the Siteworks main screen as **Top**, **Bottom** or **Hidden**.

Configure Information Bar/Panel

Information Bar Information Panel Settings

Bar location: Top

- ☒ Antenna / Target height
- ☒ Cut/Fill A
- ☒ Design elevation A
- ☒ Elevation
- ☒ Northing
- ☒ Easting
- ☐ Latitude
- ☐ Longitude
- ☐ Height
- ☐ Cut/Fill B

ACCEPT

\*Configure the **Information Panel** the same way as the **Information Bar** to display the selected items in priority order as well.

The screenshot shows the 'Configure Information Bar/Panel' window with the 'Information Panel' tab selected. The window title is 'Configure Information Bar/Panel'. The top bar contains 'Information Bar' and 'Information Panel' tabs, and a 'Settings' button. The main area is a list of items with checkboxes and a priority order icon (three horizontal lines). The items are: Cut/Fill A, Design elevation A, Elevation, Northing, Easting, Reference station, Reference offset (highlighted in yellow), Latitude, Longitude, Height, and Cut/Fill B. An 'ACCEPT' button is at the bottom right.

Item	Checked	Priority Order
Cut/Fill A	<input checked="" type="checkbox"/>	---
Design elevation A	<input checked="" type="checkbox"/>	---
Elevation	<input checked="" type="checkbox"/>	---
Northing	<input checked="" type="checkbox"/>	---
Easting	<input checked="" type="checkbox"/>	---
Reference station	<input checked="" type="checkbox"/>	---
Reference offset	<input checked="" type="checkbox"/>	---
Latitude	<input type="checkbox"/>	---
Longitude	<input type="checkbox"/>	---
Height	<input type="checkbox"/>	---
Cut/Fill B	<input type="checkbox"/>	---

\*From the **Settings Display precision** window drop-down list select the display precision decimal value desired for the **Info Bar/Panel**, tap **ACCEPT**.

The screenshot shows the 'Configure Information Bar/Panel' window with the 'Settings' tab selected. The window title is 'Configure Information Bar/Panel'. The top bar contains 'Information Bar', 'Information Panel', and 'Settings' tabs. The main area is labeled 'Display precision' and shows a drop-down list with the following options: 0.000, 0.0, 0.00, and 0.000. An 'ACCEPT' button is at the bottom right.

Display precision
0.000
0.0
0.00
0.000

\*After customizing the **Info Bar/Panel** your selections and their decimal precision values display in the **Info Bar (Top)** and **Info Panel (Bottom Left)** on the main Siteworks screen. (Tap the drop-down list arrow in bottom left corner to select the Info Panel if not currently displayed.)

