



***Measure Point: Standing**


*On the Siteworks upper left main screen tap the **Standing Rover Icon** to get to the **Measure Mode Settings Icon** screen.

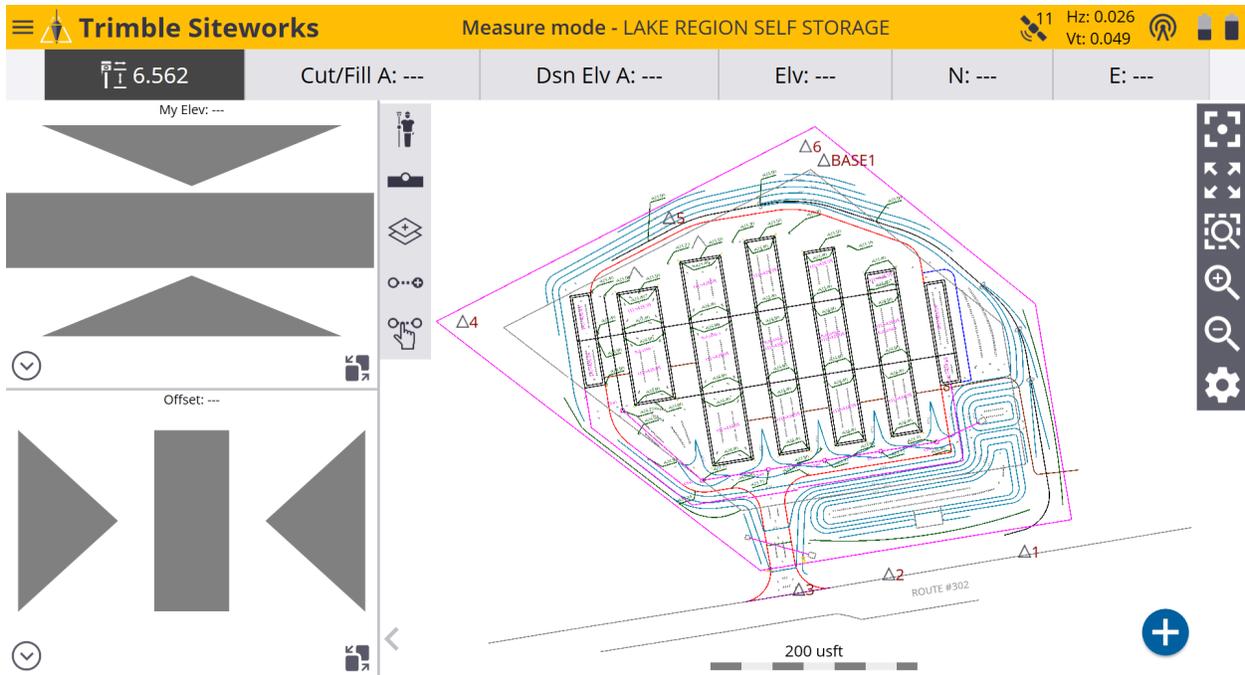


*On the **Measure Mode Settings Icon** screen tap on the blue **Standing Rover Icon** to get to the **Standing Mode Settings** screen.

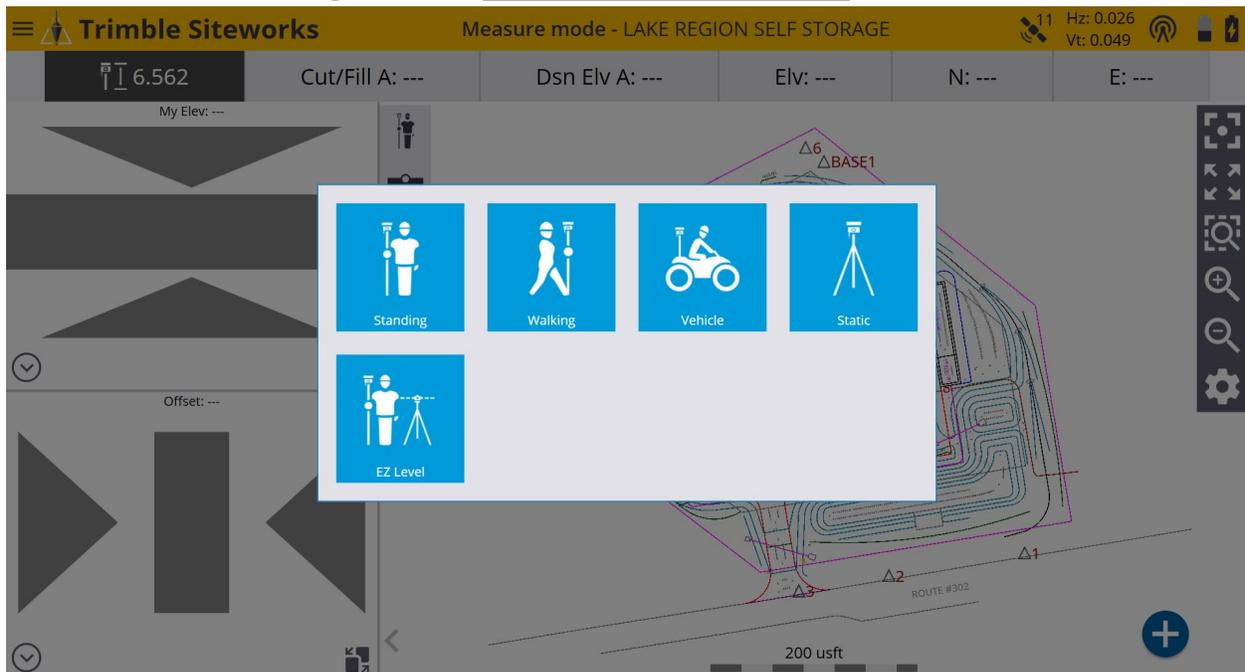

*On the **Standing Mode Settings** screen if you are using a quick release select **Yes** from the **Using Quick Release** window drop-down menu. Input the Antenna height in the **Antenna height** window (*Usually 2 Meters/6.562 usft*), tap **ACCEPT**.

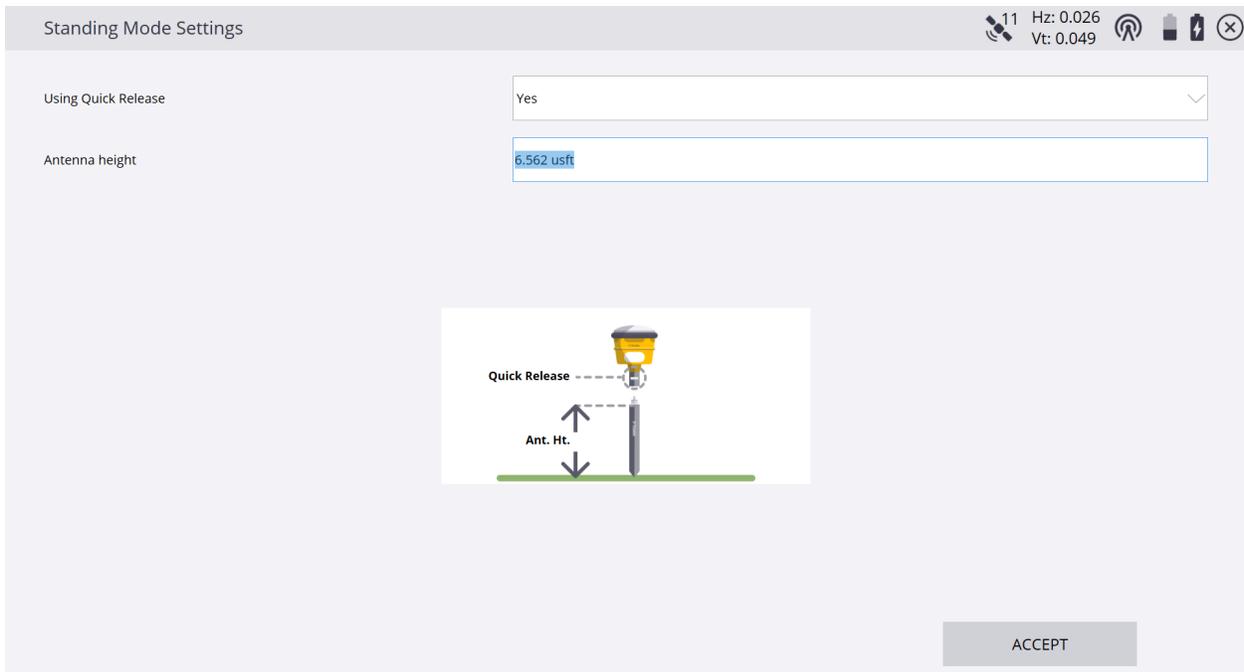

*Once back on the main **Measure mode** screen tap the **Measure Type Icon** directly below the **Standing Rover Icon** to access the **Measure Type Screen** and select **Point**, **Existing Line** or **New Line**.

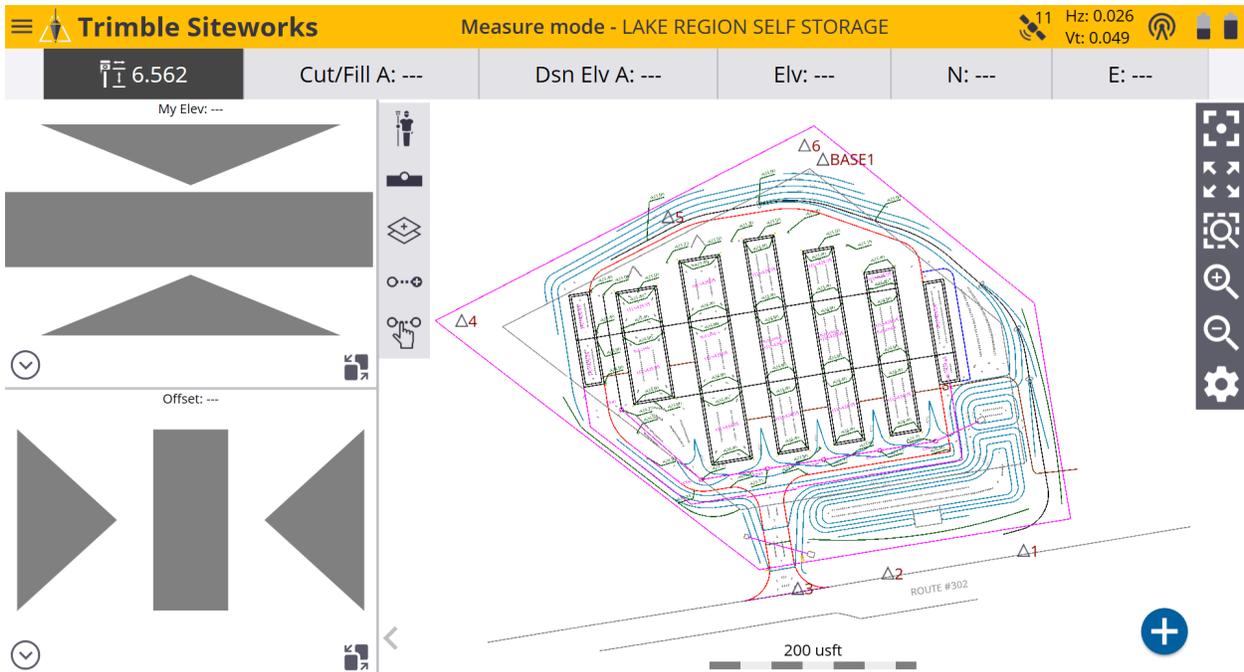

*Select **Point** and enter the starting point name and code in their corresponding windows. For the **Point type** select **Surface** if you want the points to be used in a surface or **Feature** if you do not.

Measure Type

Point Existing Line New Line

Point name Topo1

Point code

Point type Surface

Show every time Yes

Create report after storing point

ACCEPT

*You can display the **Measure Type** screen every time after each measured point by selecting **Yes** or **No** from the **Show every time** window drop-down menu and **Create report after storing point** by checking the box to the left, tap **ACCEPT**.

Trimble Siteworks Measure mode - LAKE REGION SELF STORAGE

11 Hz: 0.026 Vt: 0.049

6.562 Fill A: 6.563 Dsn Elv A: 424.573 Elv: 418.010 N: 434051.030 E: 2744384.192

My Elev: 418.010 usft

C/F: -6.563 usft

Offset: ---

200 usft