



***Measure Point: Walking**

*On the Siteworks upper left main screen tap the **Standing Rover Icon** to get to the **Measure Mode Settings Icon** screen.

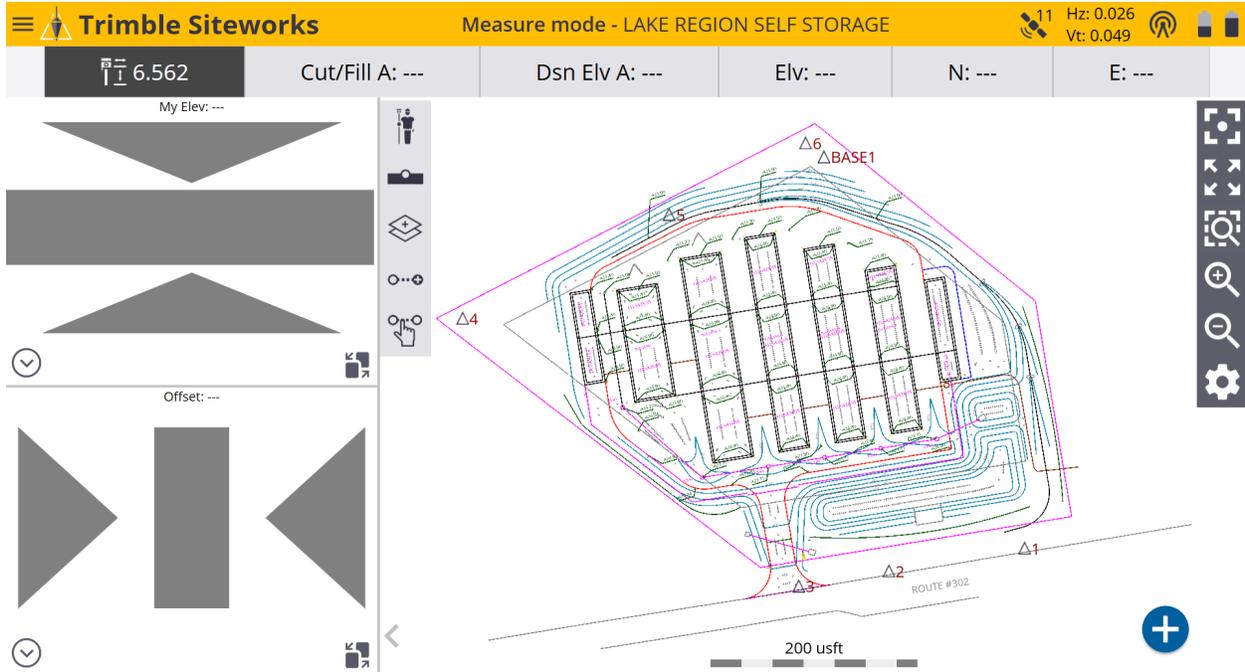

*On the **Measure Mode Settings Icon** screen tap on the blue **Walking Rover Icon** to get to the **Walking Mode Settings** screen.

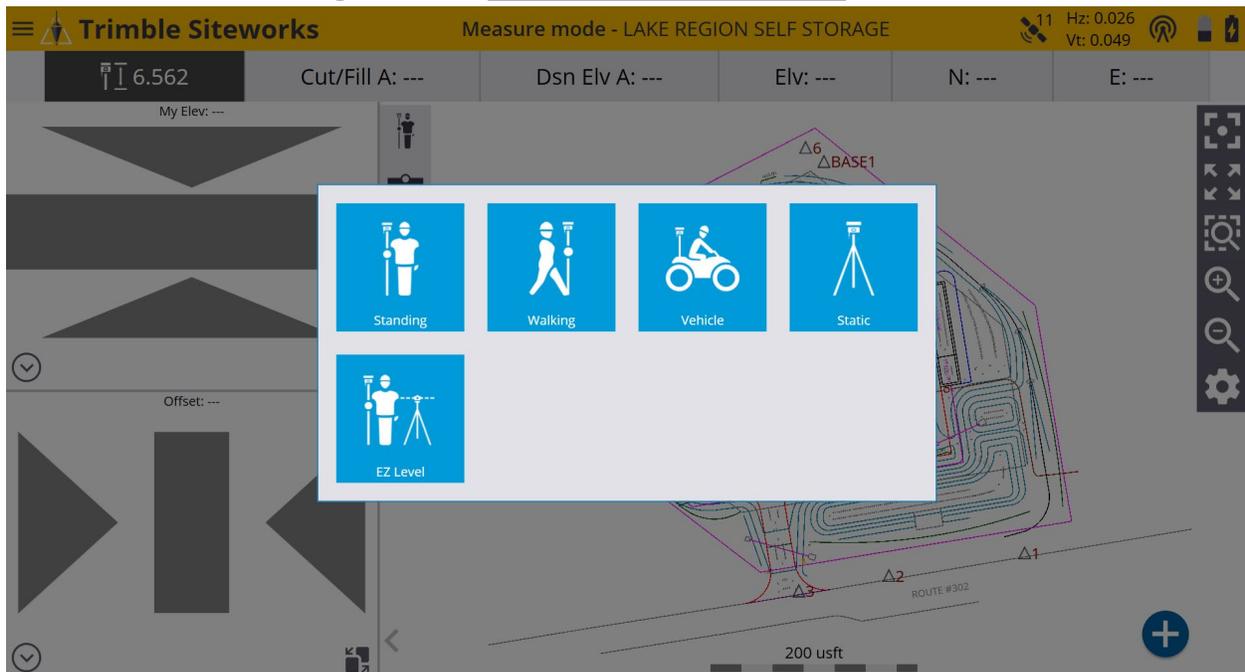

*On the **Walking Mode Settings** screen if you are using a quick release select **Yes** from the **Using Quick Release** window drop-down menu. Input the Antenna height in the **Vertical height** window. (*Usually 2 Meters/6.562 usft*)

Walking Mode Settings

Using Quick Release: Yes

Vertical height: 6.562 usft

Record mode: Fixed Distance

Horizontal interval: Fixed Distance

Vertical interval: Measure When Level

ACCEPT

*On the **Walking Mode Settings** screen select **Fixed Distance** from the **Record mode** window drop-down menu, then input your desired **Horizontal interval** and **Vertical interval** values in their corresponding windows.

Walking Mode Settings

Using Quick Release: Yes

Vertical height: 6.562 usft


Record mode: Fixed Distance

Horizontal interval: 16.404 usft


Vertical interval: 0.656 usft

ACCEPT

*Tap the ? (question mark) to the right of the **Vertical height** window to enter the **Antenna Height** screen to visualize the antenna height configuration from the ground to the bottom of quick release, tap X in upper right corner to exit.

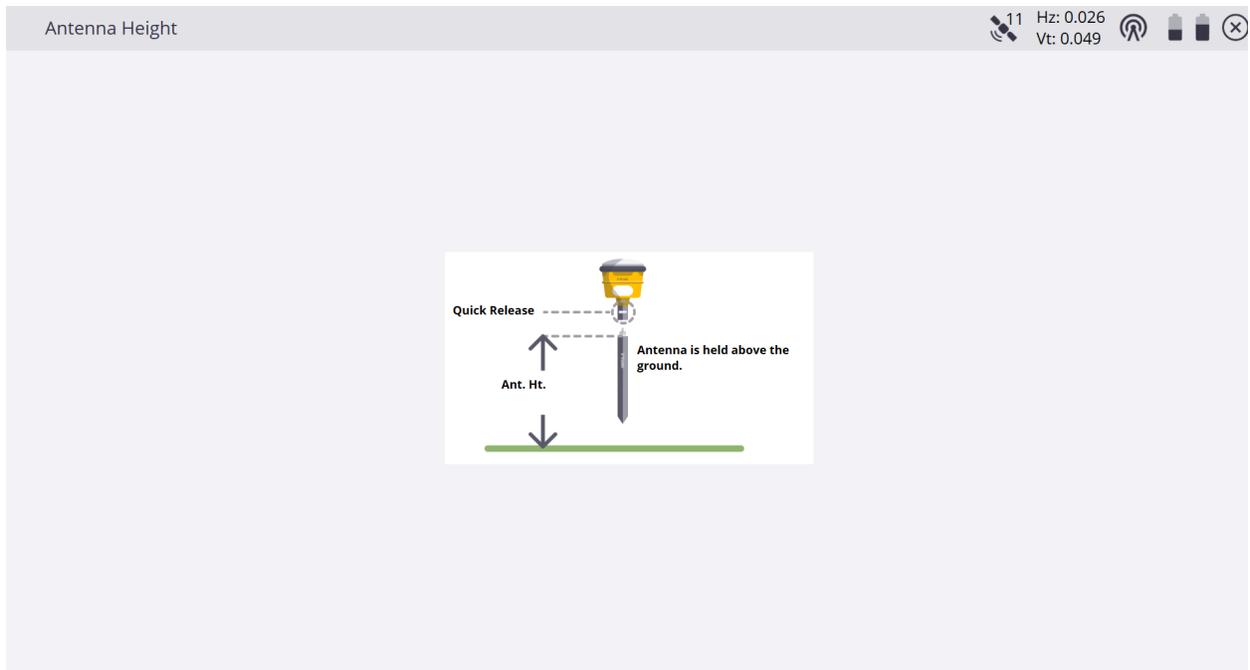

*On the **Walking Mode Settings** screen select **Fixed Time** in the **Record mode** window drop-down menu, then input your desired time interval (*in seconds*) in the corresponding **Time interval** window.

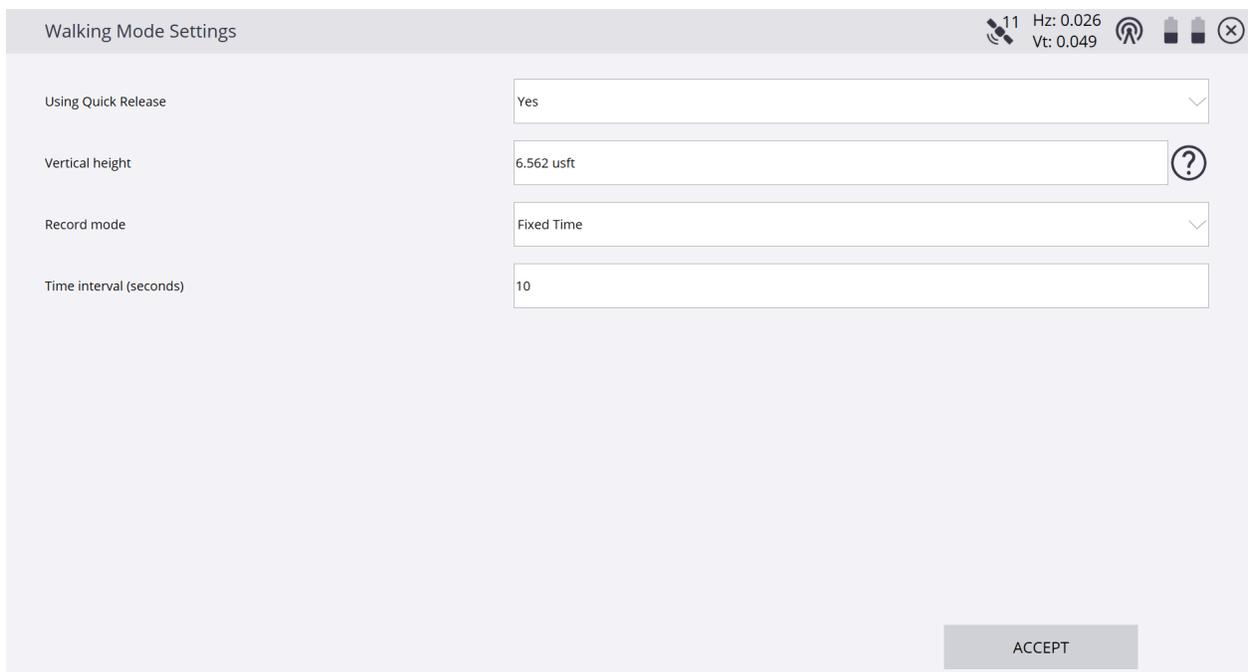

*On the **Walking Mode Settings** screen select **Measure When Level** in the **Record mode** window drop-down menu, then input your desired values for **Tilt tolerance** and **Time interval** (in seconds) in their corresponding windows.

Walking Mode Settings

Using Quick Release: Yes

Vertical height: 6.562 usft

Record mode: Measure When Level

Tilt tolerance: 0.066 usft

Time interval (seconds): 10

ACCEPT

*After configuring your desired **Record mode**, tap **ACCEPT**. Once back on the main **Measure mode** screen notice that the **Standing Rover Icon** is now the **Walking Rover Icon** which represents the **Measure mode** you are currently using.

Trimble Siteworks

Measure mode - LAKE REGION SELF STORAGE

6.562 Fill A: 6.562 Dsn Elv A: 424.688 Elv: 418.126 N: 434058.874 E: 2744380.429

My Elev: 418.126 usft

C/F: -6.562 usft

Offset: ---

200 usft